

SETTING/UNSETTING YOUR GALAXY 2

WITH CODE:

Full Set: Enter 4 digit PIN and press A.
Part Set: Enter 4 digit PIN and press B followed by 1.
Night Set: Enter 4 digit PIN and press B followed by 2.

Unset: Enter 4 digit PIN and press ENT.

EASY SET:

Full Set: Press A.
Part Set: Press B followed by 1.
Night Set: Press B followed by 2.

Unset: Enter 4 digit PIN and press ENT.

PROX TAG:

Full Set: Hold TAG to bottom right corner of keypad
Until timer starts.

Unset: Hold TAG to bottom right corner of keypad
For 1 second.

Note: TAG will only full set the system, to Part or
Night set will still need to be done using
Keypad.

TAG will only disarm system on countdown
If alarm sounding off PIN followed by ENT
Will need to be used at keypad.

USER/MASTER RESET:

1. Enter 4 digit PIN and press A.
2. Press A to view event.
3. Press ENT to continue.
4. Repeat step 3 for each event.
5. Once all events viewed full set countdown will start press ESC to abort countdown.